 


Document Camera Guide - WolfVision VZ-8plus³



INTRODUCTION

The WolfVision VZ-8plus³ Document Camera is a real-time image capture device which allows you to present live objects to your audience.







REQUIREMENTS

- A WolfVision VZ-8plus³ Document Camera must be installed *if another model of document camera is installed, please follow the appropriate user quide*
- The Crestron Control Panel in the room must have **DOC CAMERA** as the selected input mode



PRESENTATION

Step 1



Pull the camera arm upwards using the pull ring

Step 2



Press the **Power Button** to switch the Document Camera on (the green power indication LED will illuminate)

Step 3



Adjust the camera head as necessary

Step 4



Objects placed under the camera are magnified and displayed on the projector screen

Operating Panel Controls


Zoom Wheel (menu: scroll wheel) - turn the wheel down to zoom in & - up to zoom out

Manual Focus Keys (menu: select keys) - press to manually focus the image

Auto Focus Key (menu: help key) - press to switch Auto Focus on/off-

Freeze Key - press to freeze the current image -

External Input / Menu Key – switches to external input (press and hold for <u>1 second</u> to activate the on-screen menu)

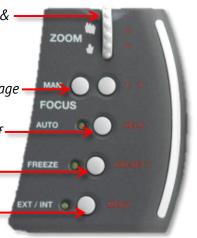


Further Information

LIGHT




Press the **Light Button** (located next to the **Power Button**) to switch the top light on/off. The **Light Button** also works as a *White Balance* key, if pressed for 2 seconds.

SLIDE DRAWER

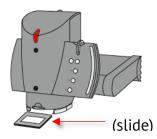

A slide drawer is located on the underside of the camera. When a slide is inserted in to the slide drawer, it is automatically recognised and projected.

ADAPTER LENS

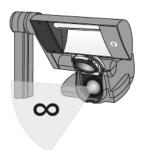

The close-up lens can be removed to shoot objects outside of the working surface – simply hinge the lens away from the camera head.



TROUBLESHOOTING

Issue	Resolution
Nothing is shown on the projector/display screen	Ensure the projector/display screen is switched on and the DOC CAMERA option is selected on the Crestron Control Panel
The displayed image is blurry	Press the grey Auto Focus Key on the operating panel and ensure that the camera lens in clean
The Document Camera is malfunctioning	Restart the <i>Document Camera</i> (press the Power Button or remove and re-insert the power cable)
The troubleshooting instructions have been followed and there is still an issue	Please contact the IT Service Desk: - Internal: 65515 - External: 01202 965515